


# DECCO

— tape saturation & doubletracker

# TOP PANEL FUNCTIONS

## ● BLEND

Sets the relative mix level of the two tape decks.

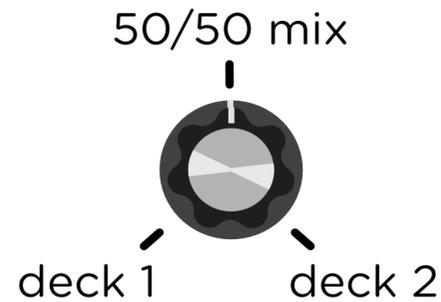

## ● SATURATION

Sets the amount of tape drive, dynamic compression and distortion.

## ● VOLUME

Controls the output volume of the Saturation.


## ● TAPE SATURATION BYPASS

Engages and bypasses Deco's Tape Saturation effect.



## ● LAG TIME

Sets the delay offset between two tape decks.

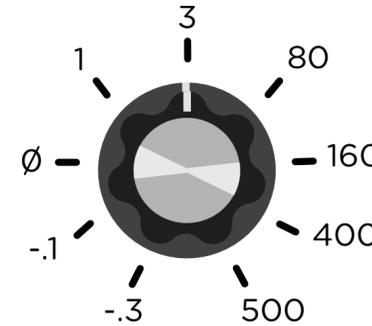

TAPE FLANGE	-0.3 to 3 ms
TAPE CHORUS	3 to 50 ms
SLAPBACK	50 to 150 ms
TAPE ECHO	150 to 500 ms

## ● WOBBLE

Adds a random speed modulation effect element to Deck 2.

## ● TYPE

Adjusts doubletracker phase and internal routing to tailor tonality and low-end response.

## ● DOUBLETRACKER BYPASS

Engages the Doubletracker, hold to engage the instant Auto-Flange feature.

## REAR PANEL FUNCTIONS

### ● INPUT


High impedance mono or TRS stereo input (internal jumper configurable - see full user manual for details).

### ● STEREO OUTPUTS

Use left output for mono operation.

### ● POWER

Use an adapter with the following rating: 9VDC center negative. 250mA minimum.

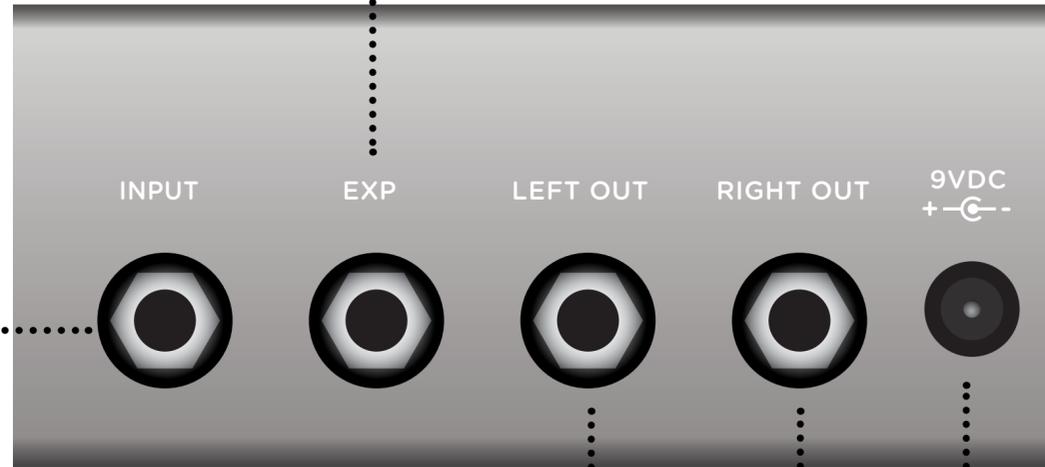

### ● EXP

Connect a standard TRS expression pedal for continuous control over any selectable knob parameter. To select the knob controlled by the expression pedal, hold the TAP footswitch during power up. The first knob turned is then assigned to the expression pedal. The maximum position the knob is turned up to becomes the expression pedal “toe down” maximum value.



### ADD EVEN MORE CONTROL & FLEXIBILITY

Connect the optional Strymon Miniswitch to remotely tap Lag Time tempo or to quickly access a saved favorite setting. See [strymon.net/support](http://strymon.net/support) for more details.

## SECONDARY FUNCTIONS & SAMPLE SETTINGS




- **HIGH TRIM** Reduces high frequencies. Full bandwidth at minimum.
- **LOW TRIM** Reduces low frequencies. Full bandwidth at minimum.
- **3dB BOOST/CUT** Doubletracker Boost/Cut for precise level matching. Unity gain at 12:00.
- **WIDE STEREO MODE** Turn past 12:00 to send Deck 1 to Left Out and Deck 2 to Right Out. Disabled with mono out.
- **AUTO-FLANGE TIME** Sets the sweep time for the press-and-hold Auto-Flange feature. Fastest at minimum.


**NOTE:** Secondary functions are accessed by holding both footswitches while turning control knobs.



**SUBTLE CHORUS**

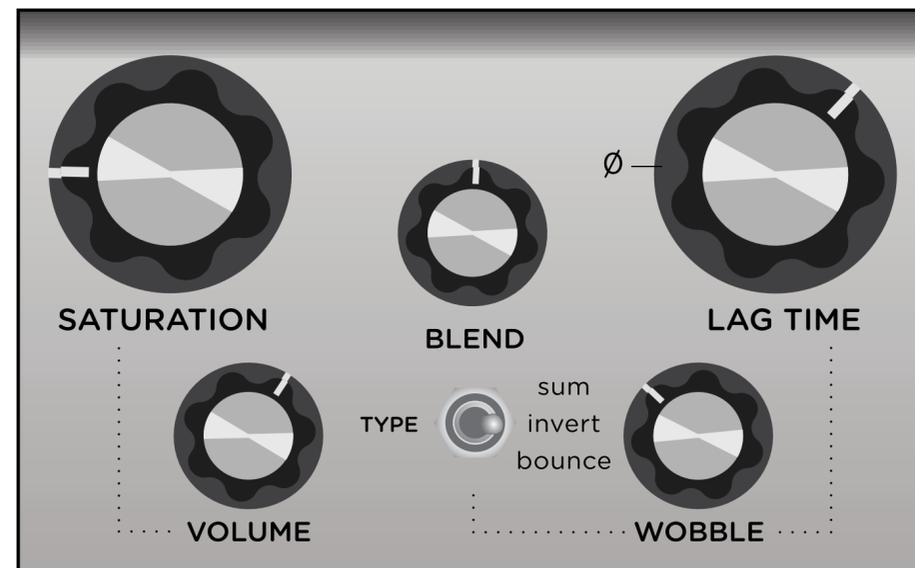

**SLAPPY**

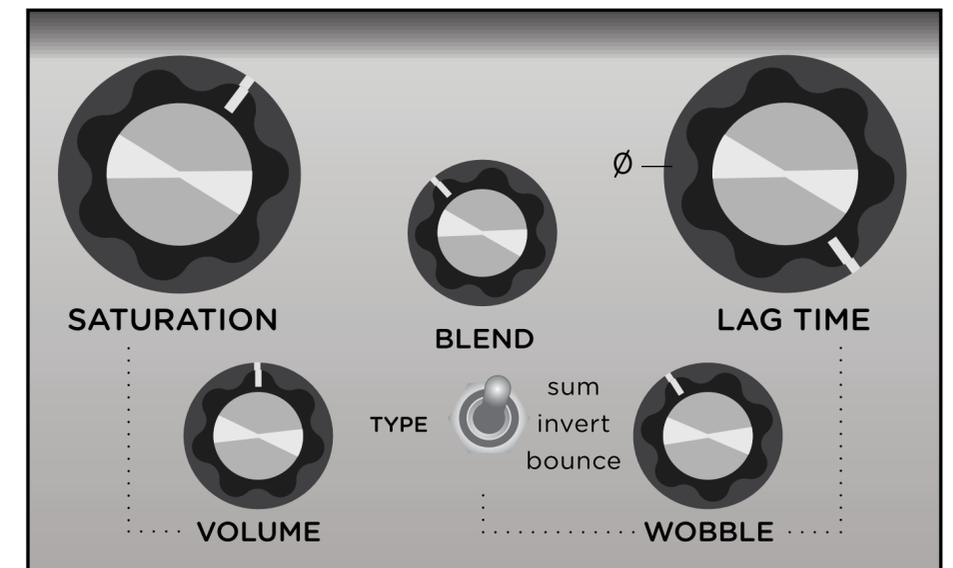

**LEADS**

**strymon**<sup>®</sup>  
strymon.net