

MULTI

— switch

GETTING STARTED

■ STEP ONE

Connect the included TRS cable from the MultiSwitch to the EXP input of the pedal.

■ STEP TWO

Select an expression mode (**EXP MD**) from the GLOBLS menu of the pedal.

■ WORKS WITH...

TIMELINE
Big Sky
MOBIUS

EXPRESSION MODES:




Preset Down

Tap Tempo

Preset Up



Bank Down

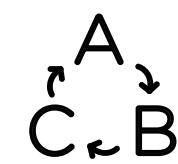


Bank Up



Preset Down

Bypass

Preset Up

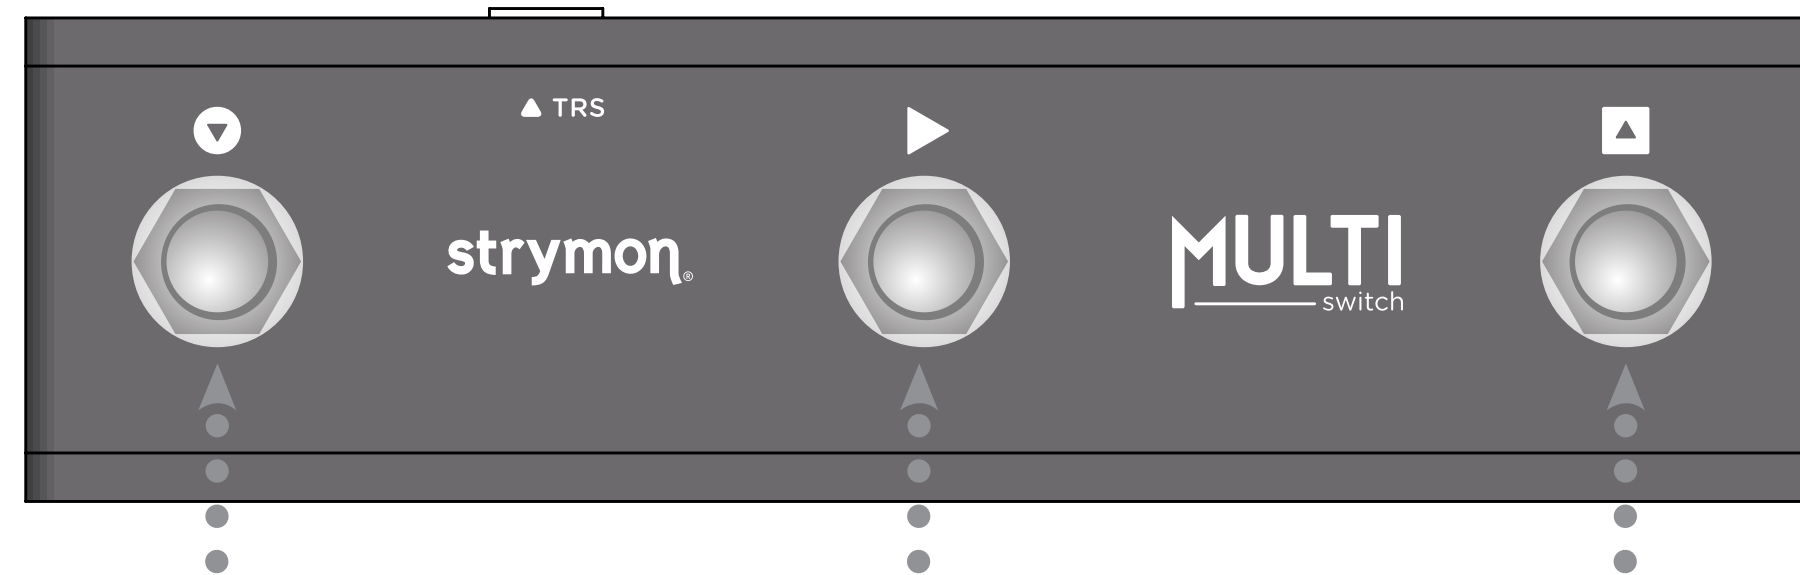

Note: If you do not see these options in your GLOBLS menu, your pedal's firmware may need to be updated. See Strymon.net/update for more information.

EXPRESSION MODE:

Available on TimeLine Only

LOOPER

Set Expression Mode (**EXP MD**) to LOOPER in the GLOBAL menu, and control Rec/Dub, Play, and Stop with MultiSwitch. Or, enter TimeLine Looper Mode (**press/hold TimeLine TAP**), and MultiSwitch controls Reverse, Half Speed, and Undo/Redo.



■ REC / DUB

Records if no loop present. Clears loop and records if stopped. Overdubs if playing.

■ PLAY

Plays loop if stopped. Re-triggers loop from beginning if already playing.

■ STOP

Stops loop during playback.

■ REVERSE

Plays or records in reverse.

■ HALF SPEED

Plays or records at half speed. Activate before recording to double recording time.

■ UNDO / REDO

Removes last group of overdubs. Second press adds back the removed overdubs.

strymon[®]
strymon.net