

# *Ola*

dBucket Chorus  
& Vibrato

## TOP PANEL FUNCTIONS

### ● TYPE

Switches from a traditional single delay-line chorus in **chorus** mode, to a studio three-phase multi-delay-line in **multi** mode, to a vintage vibrato in **vibrato** mode.

### ● SPEED

Adjusts the LFO speed of the chorus or vibrato.

### ● MIX

Adjusts wet/dry mix.

### ● FAVORITE

Press to select a saved favorite setting. When each knob is turned, the LED will indicate saved favorite knob position. Press and hold to save a new favorite setting.



### ● BYPASS

Engages and disengages effect. LED ON indicates that the effect is engaged. Press and hold to activate the ramping effect when in **ramp** mode.

### ● MODE

Switches between **normal** on/off operation, **envelope** controlled operation where the effect is sensitive to your playing level, and **ramp** mode, where the effect ramps in while the BYPASS footswitch is held down.

### ● DEPTH

Adjusts the LFO depth of the chorus or vibrato.

### ● TONE

Adjusts treble frequencies of the wet signal. Flat response at 12 o'clock.

### ● RAMP | ENV

In **ramp** mode, adjusts the speed of the ramping effect. In **env** mode, adjusts the sensitivity to your playing.

 
# REAR PANEL CONNECTIONS

## ● STEREO INPUTS

High impedance stereo inputs. Use LEFT IN for mono signal input.


## ● STEREO OUTPUTS

Stereo outputs. Use LEFT OUT for mono signal output.

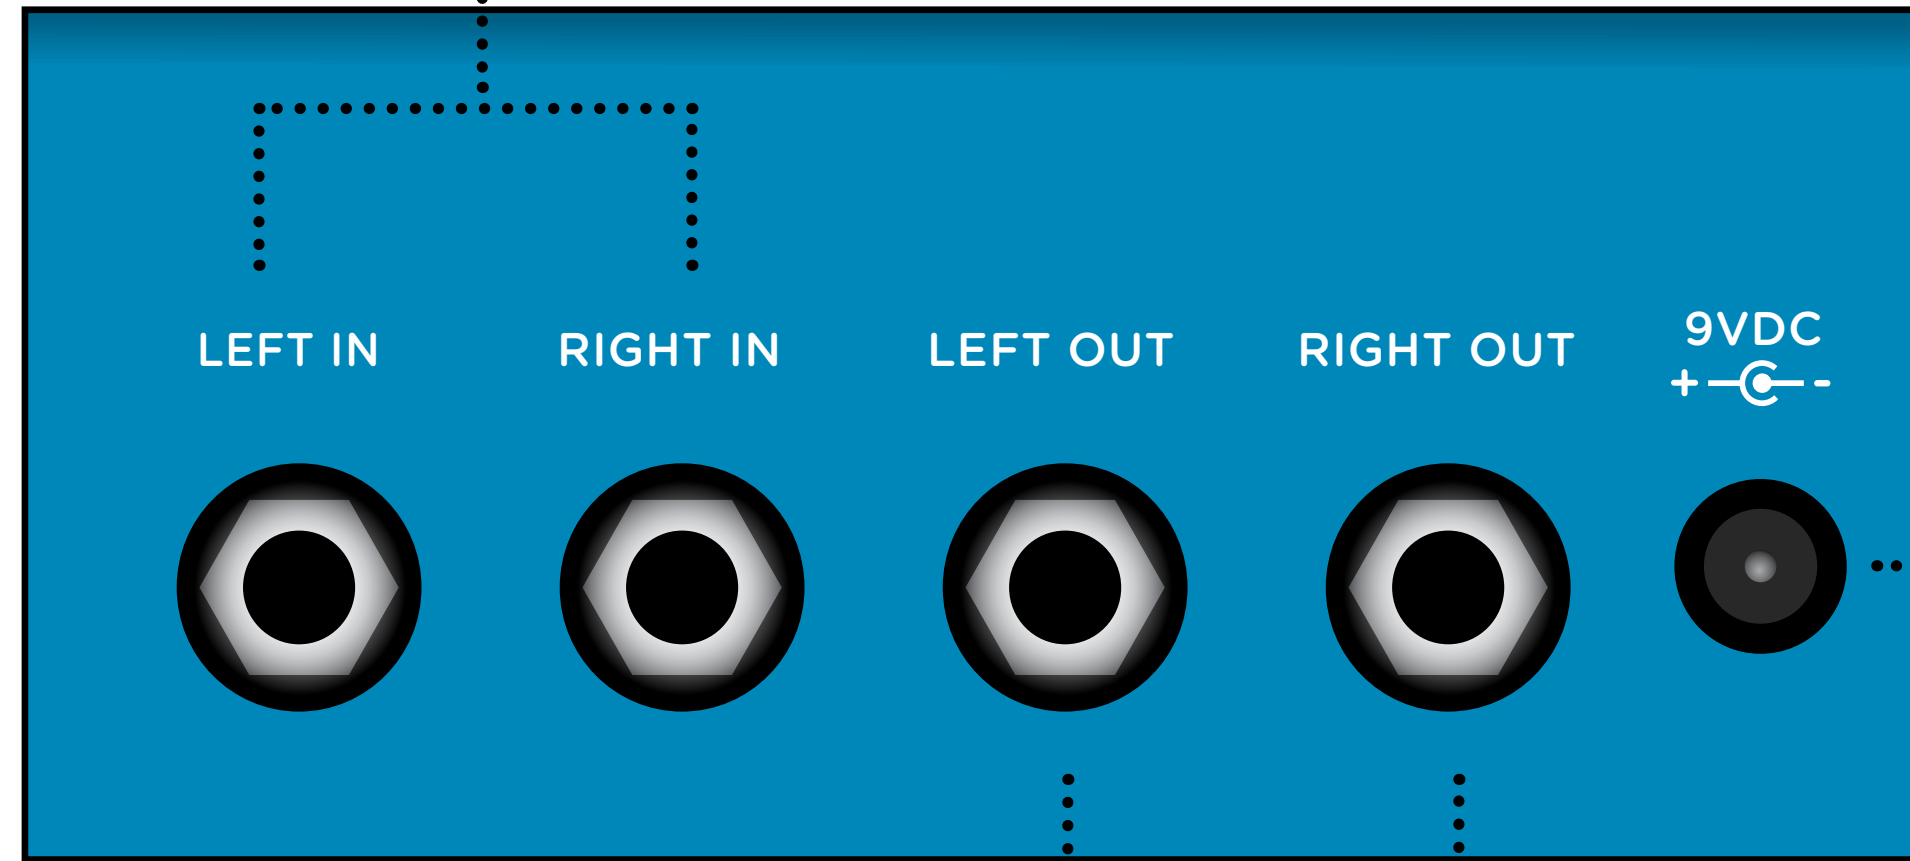

## ● POWER

 
Use an adapter with the following rating: 9VDC center negative. 250mA minimum.

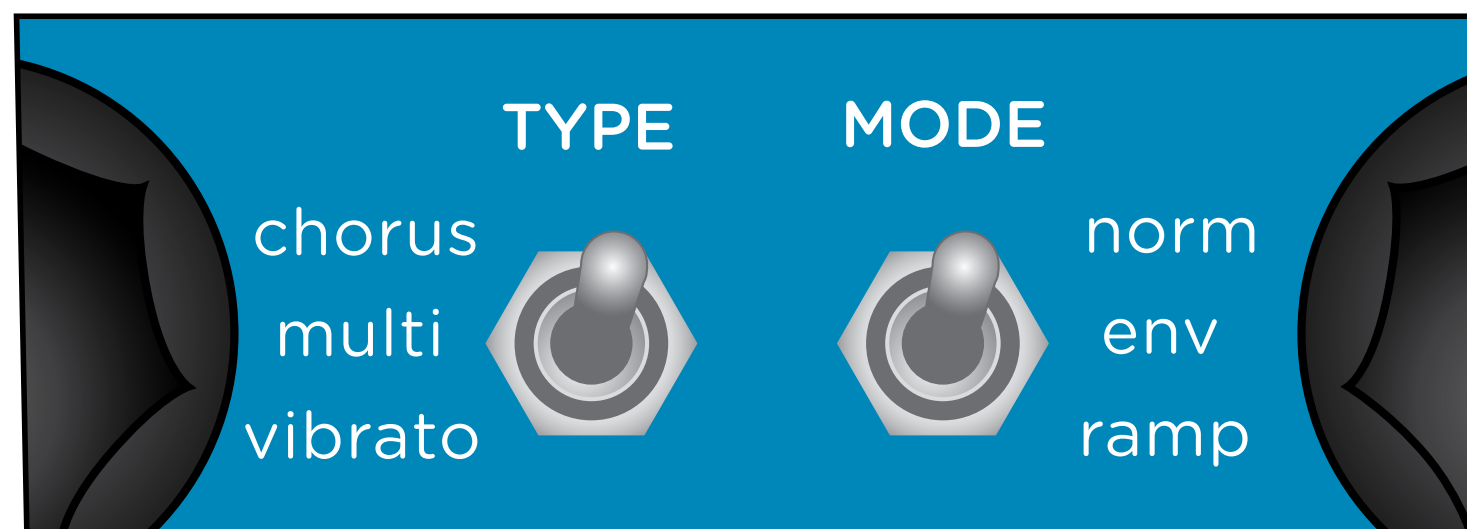


## TYPE & MODE SWITCHES

For more detailed information on Ola's different Type and Mode options, check out the full manual at [strymon.net/support/ola](http://strymon.net/support/ola).

 
# SAMPLE SETTINGS

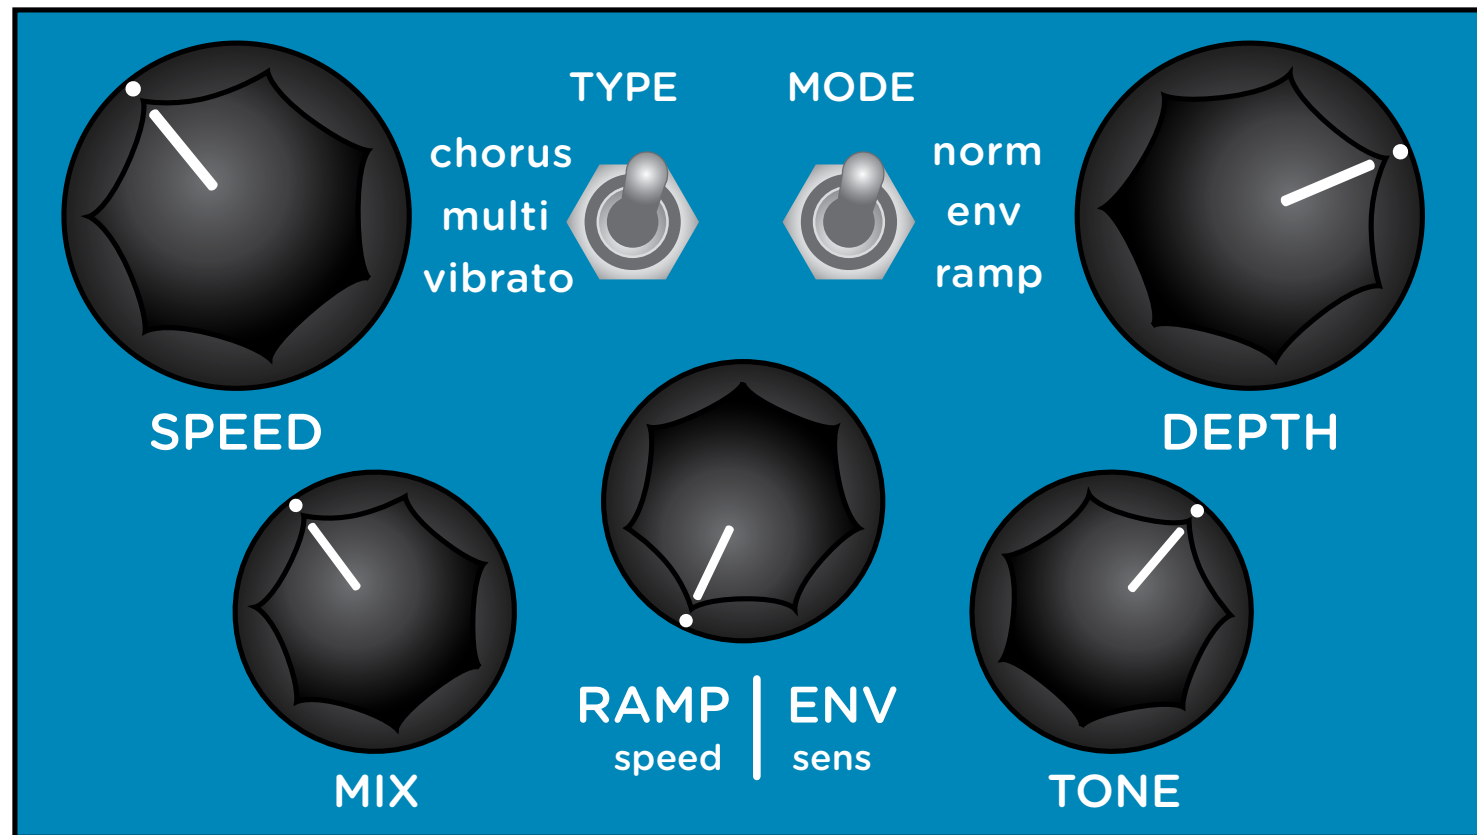


LUSH

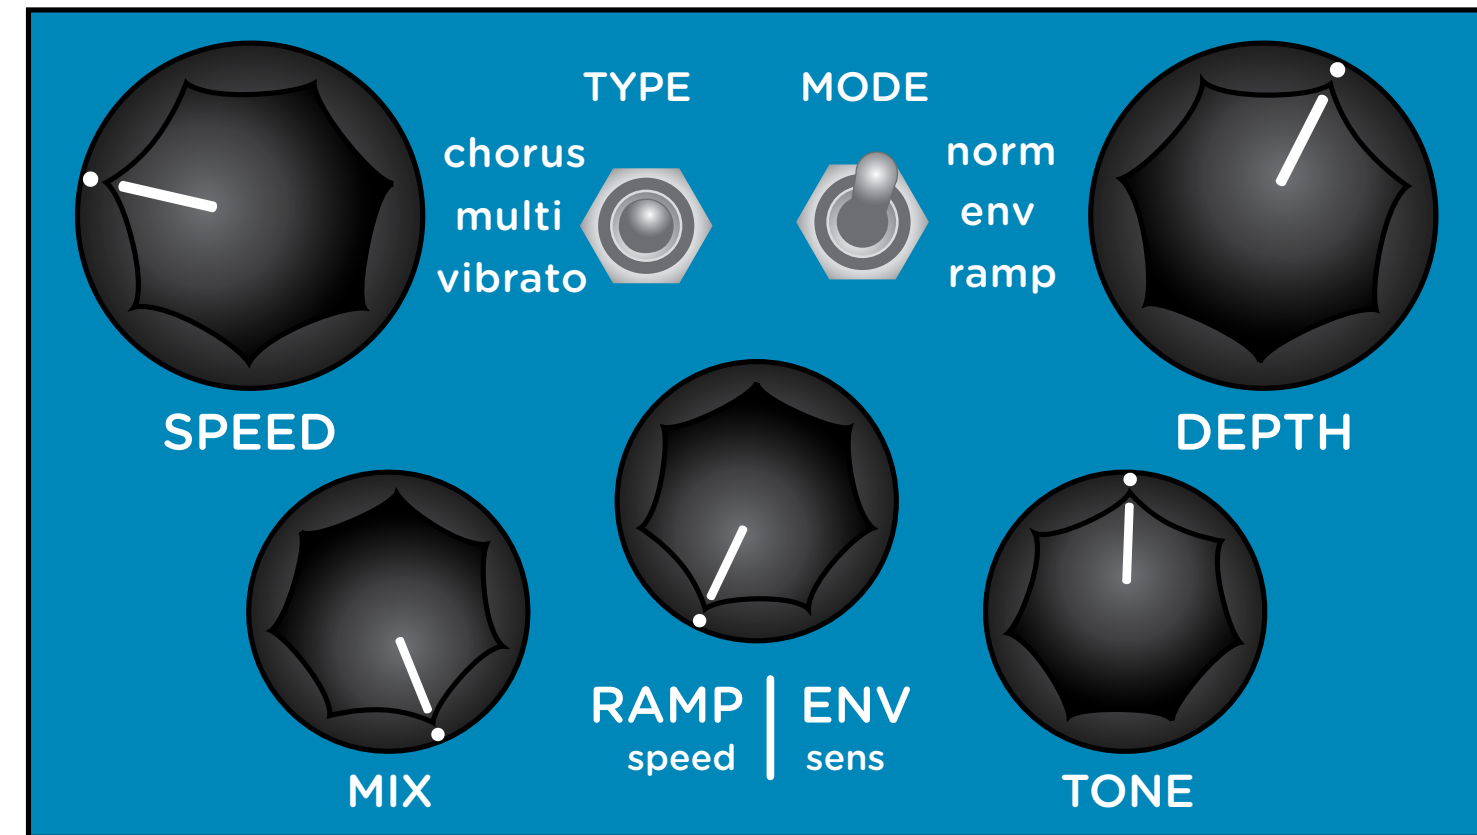 


WET STUDIO

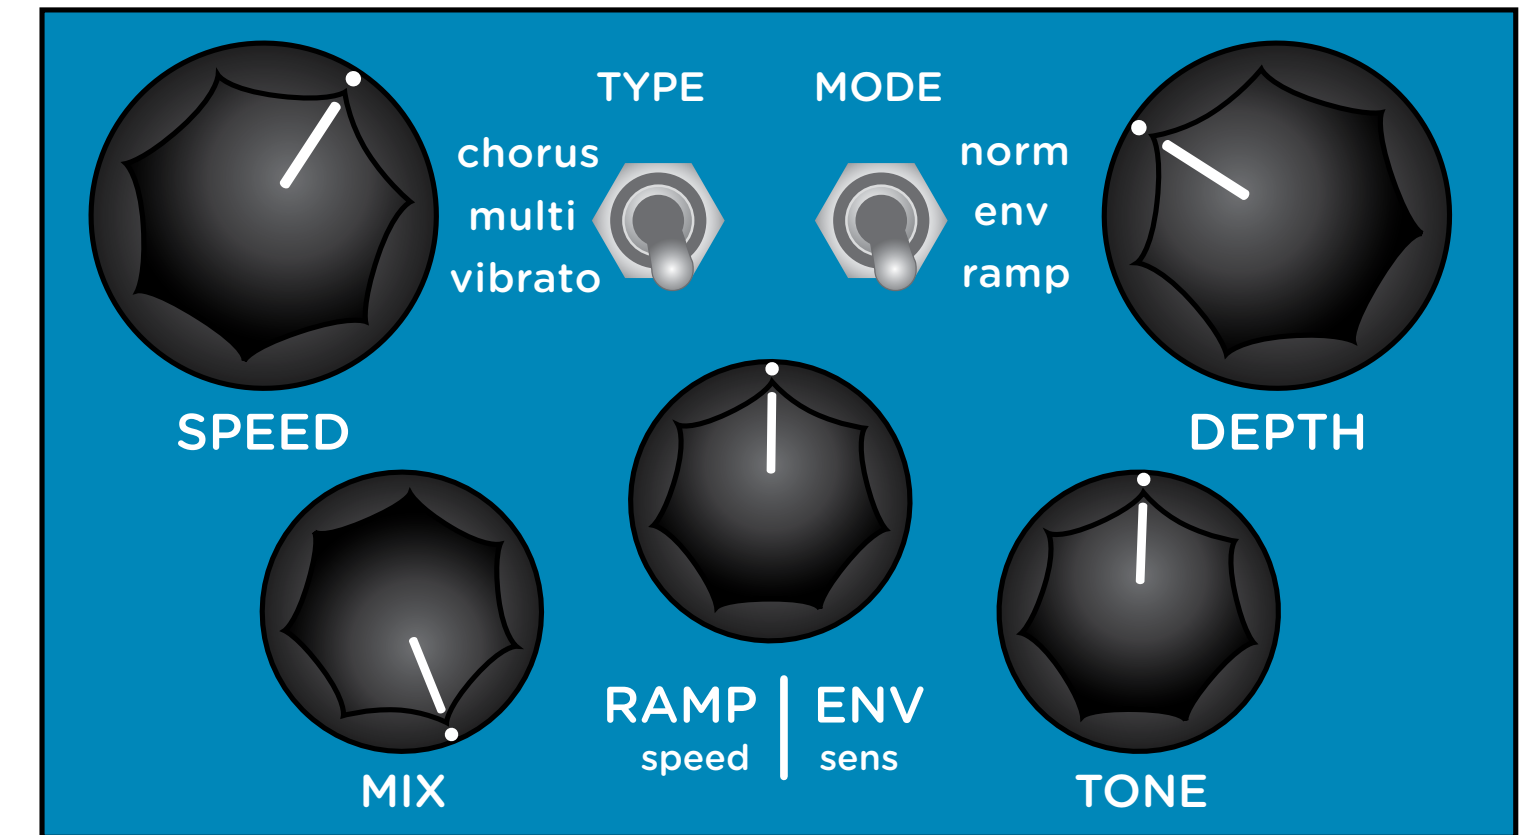 


HYPNO RAMP

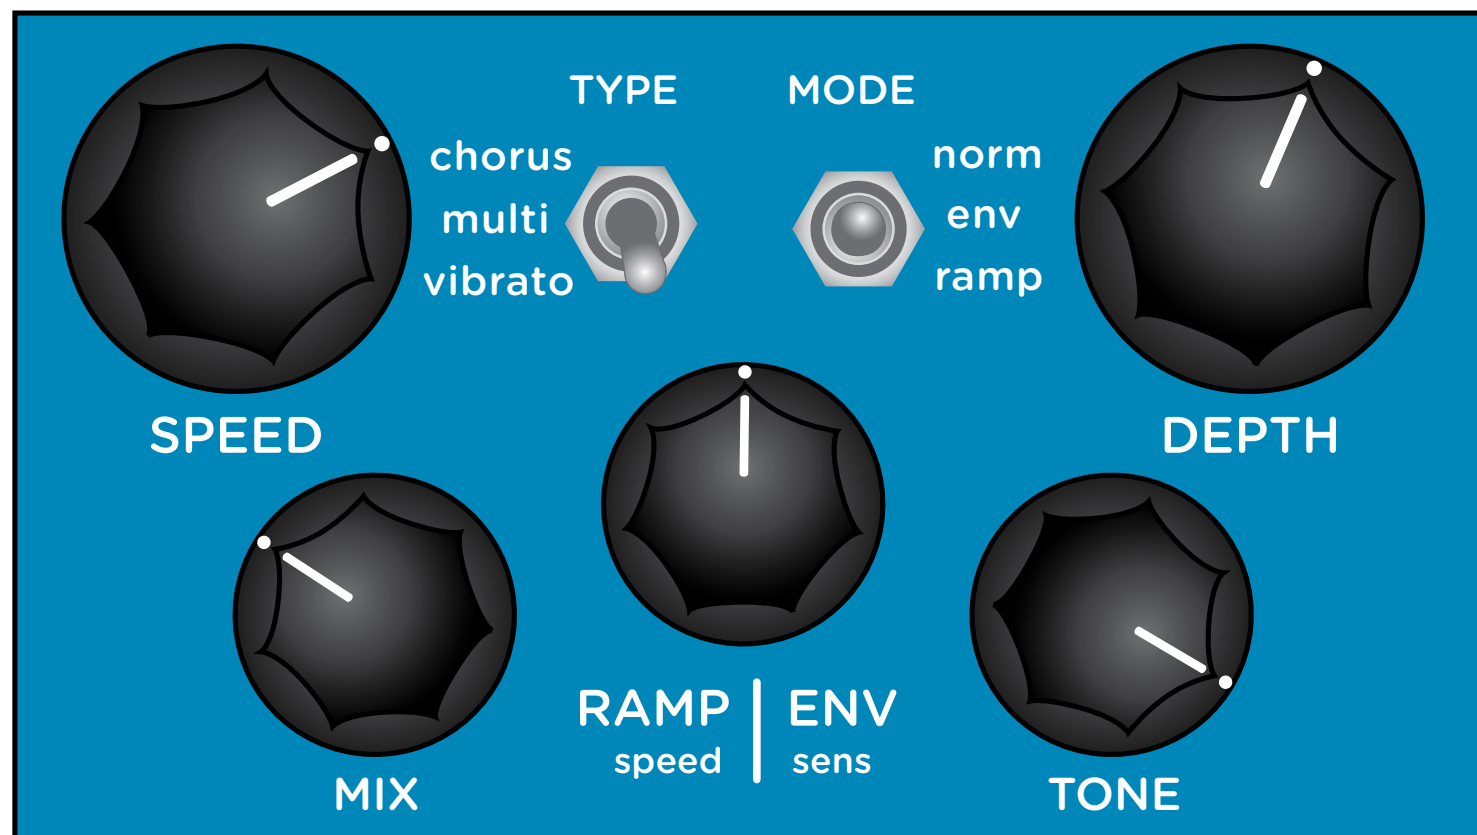 

SPINSTER\*

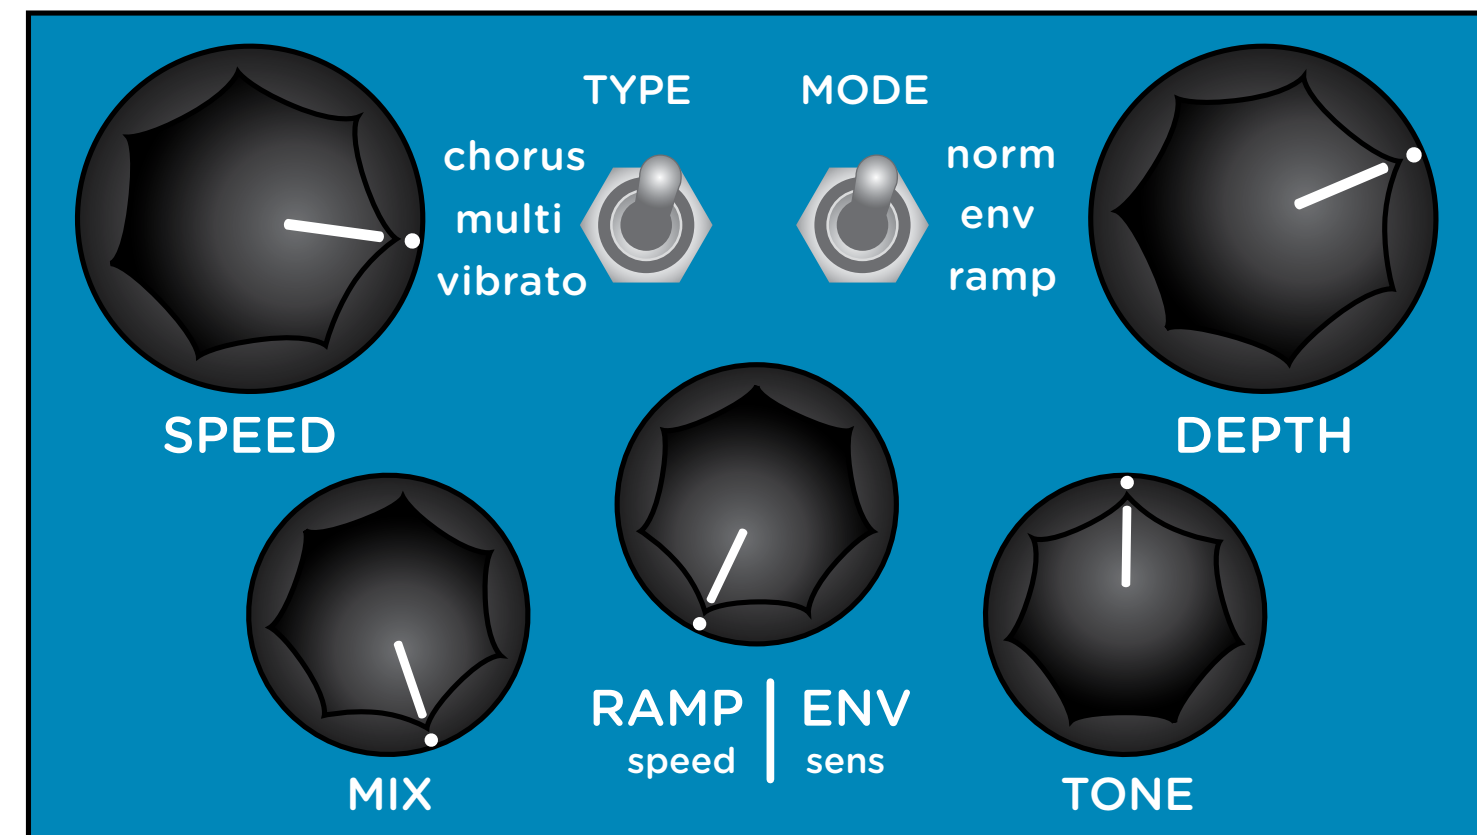 

PULSAR

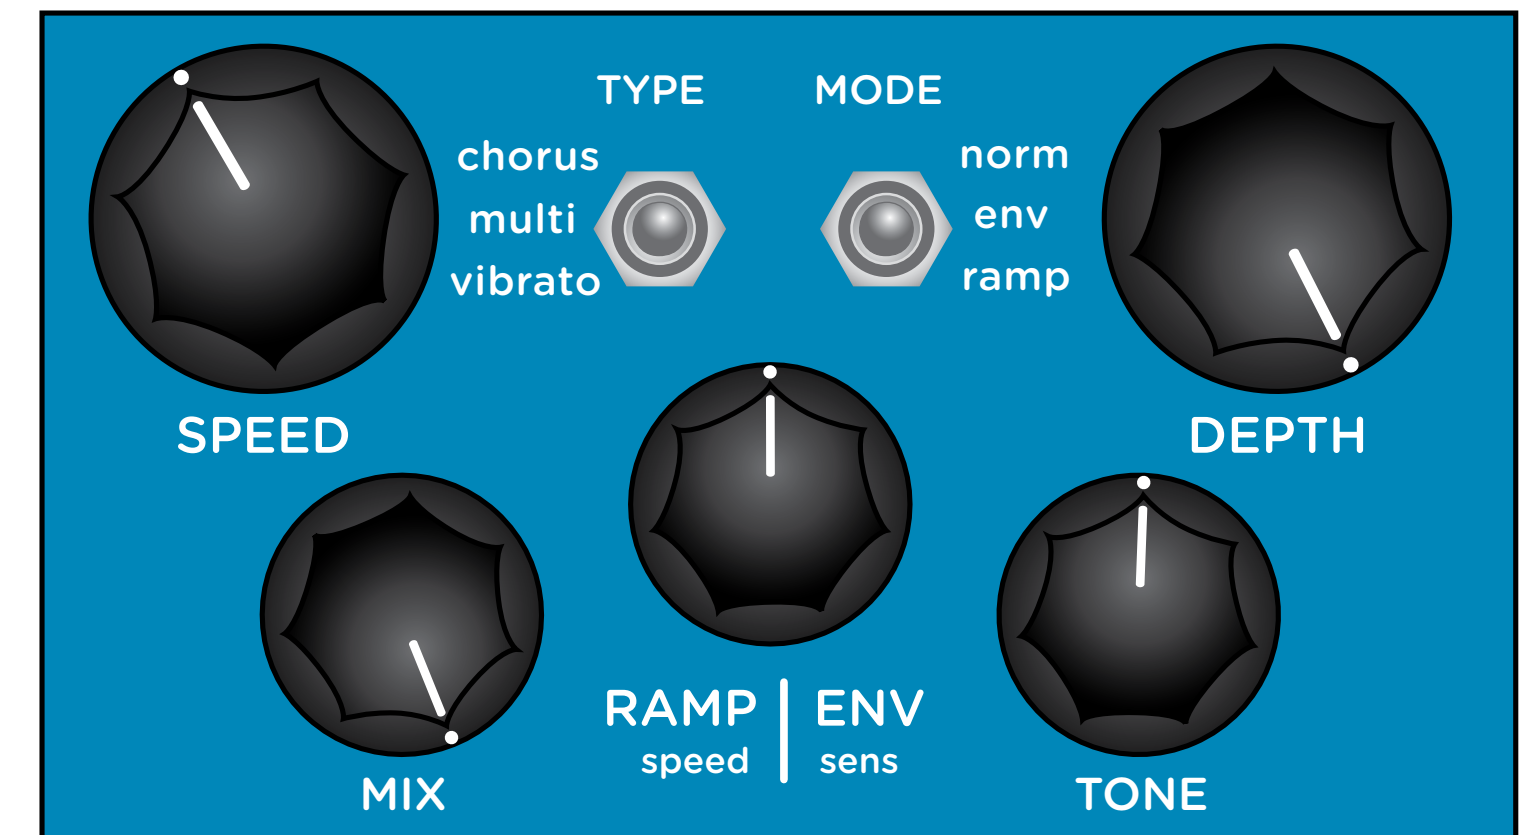 

HIT ME\*

\*Adjust ENV sens control to taste based on guitar output level.

**strymon**<sup>®</sup>  
strymon.net