


### SAFETY INFORMATION

Please refer to your drill's operation manual for complete safety precautions. Always wear protective eyewear when using a power drill.

- 1 Slip the padded brackets onto Zuma power supply.
- 2 Flip pedalboard over and place Zuma along rear supports of pedalboard. Hold in place and **mark four (4) hole locations** in center of bracket slots.
- 3 **Drill four holes** in pedalboard 1/8" (3mm) in diameter.
- 4 Place Zuma back in position and **install screws** with a screwdriver.

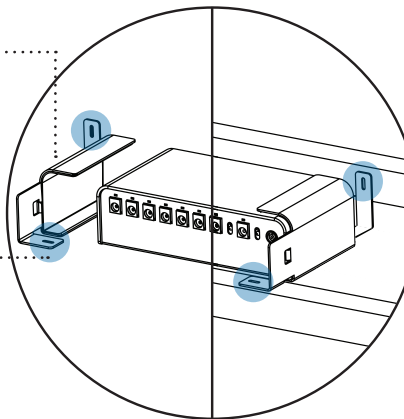

# strymon®

For more information visit [strymon.net/support](http://strymon.net/support)