



CONDUIT DRILL TEMPLATE & INSTALLATION INSTRUCTIONS

- 1 Print out this instructional PDF. Make sure to print at 100% size. To ensure accuracy use a ruler to confirm this scale is one inch:




- 2 Cut out the Conduit Drill Template below.

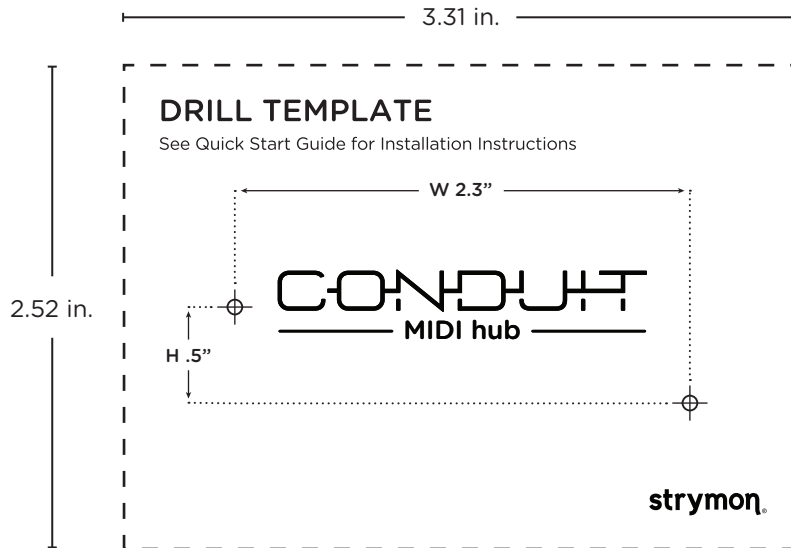

- 3 Choose your mounting location. Tape the Drill Template, logo side up, in the location you want to install your Conduit pedal.

This illustration shows mounting to the top of your pedalboard. To mount Conduit to the bottom of your pedalboard, turn the pedalboard over before placing the Drill Template logo side up in the location you want to install your Conduit.

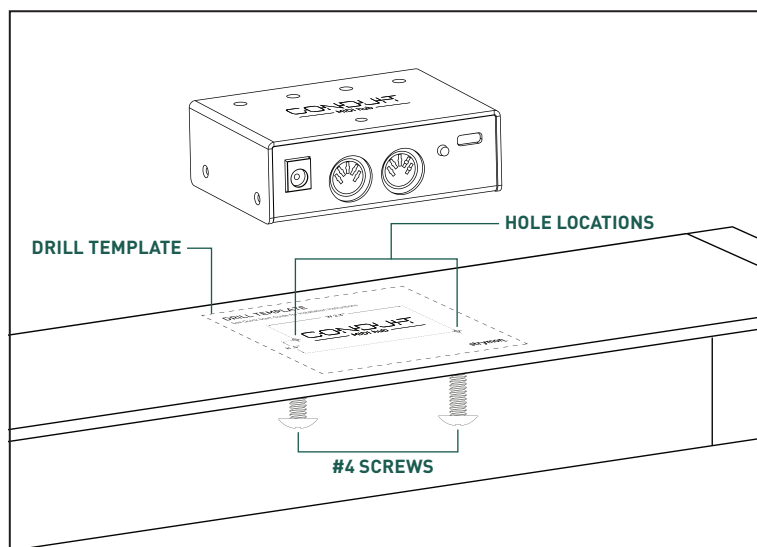

- 4 Drill holes. Drill through the two marked hole locations with a 1/8" (3mm) bit. Remove the drilling template.
- 5 Attach Conduit. Place the pedal over the holes. Install from the reverse side of your pedalboard using the provided #4-40 screws (3/8").