



# ZUMA R300 DRILL TEMPLATE & INSTALLATION INSTRUCTIONS

- 1 Print out this instructional PDF. Make sure to print at 100% size. To ensure accuracy use a ruler to confirm this scale is one inch:




- 2 Cut out the Zuma R300 Drill Template below.

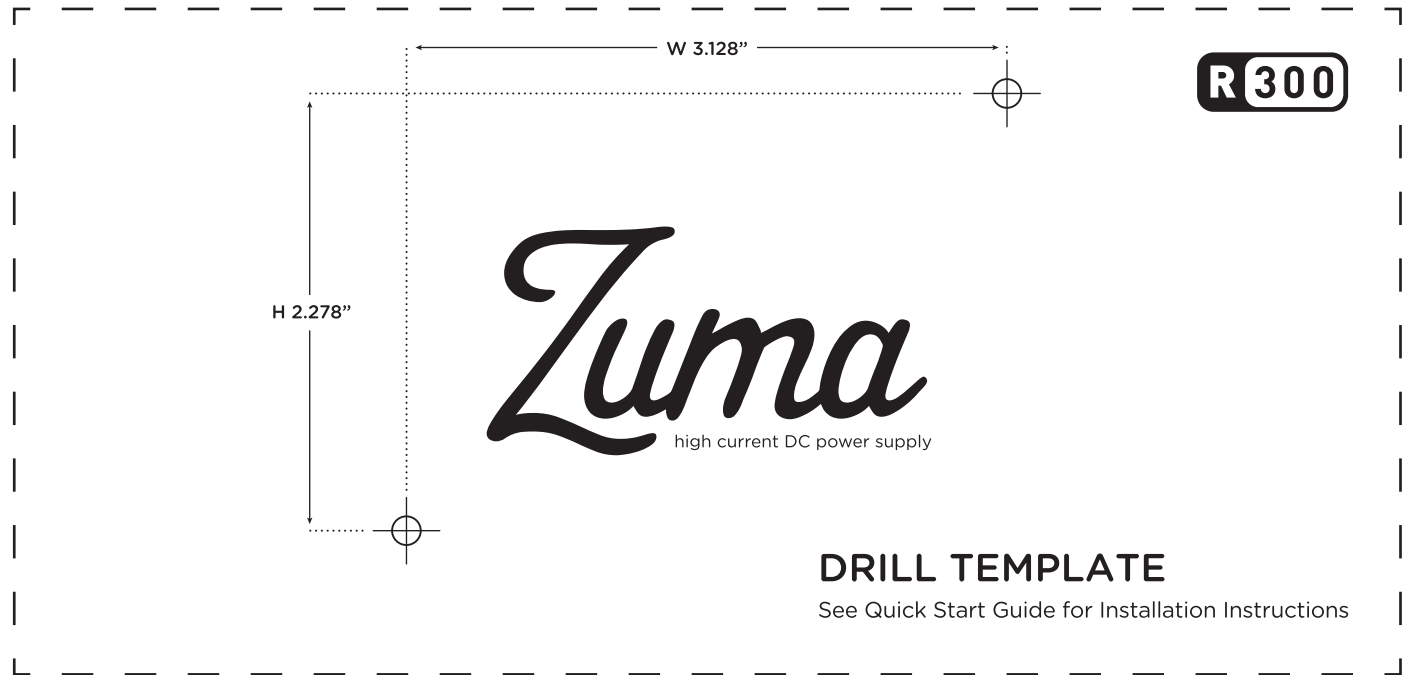

- 3 Choose your mounting location. Tape the Drill Template, logo side up, in the location you want to install your Zuma R300.

This illustration shows mounting to the top of your pedalboard. To mount Zuma R300 to the bottom of your pedalboard, turn the pedalboard over before placing the Drill Template logo side up in the location you want to install your Zuma R300.

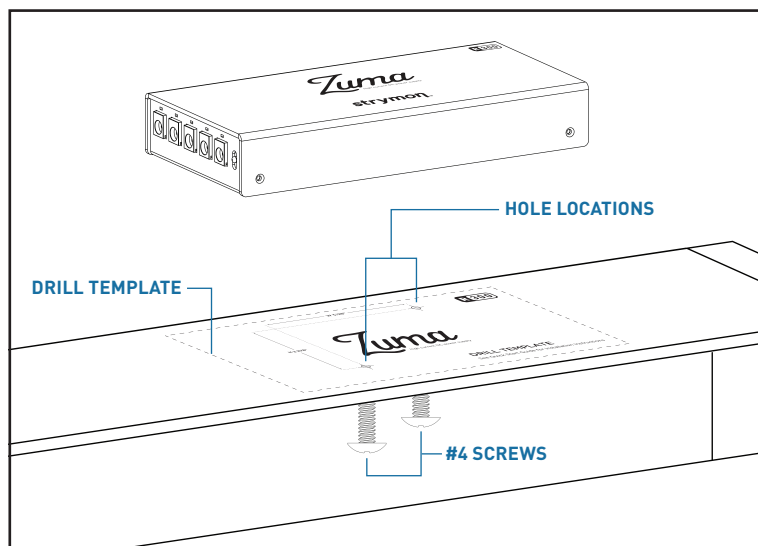

- 4 Drill holes. Drill through the two marked hole locations with a 1/8" (3mm) bit. Remove the drilling template.
- 5 Attach Zuma R300. Place the Zuma R300 over the holes. Install from the reverse side of your pedalboard using the provided #4 screws (3/8").